





Installation instructions for P/N :  
113956B-230-400

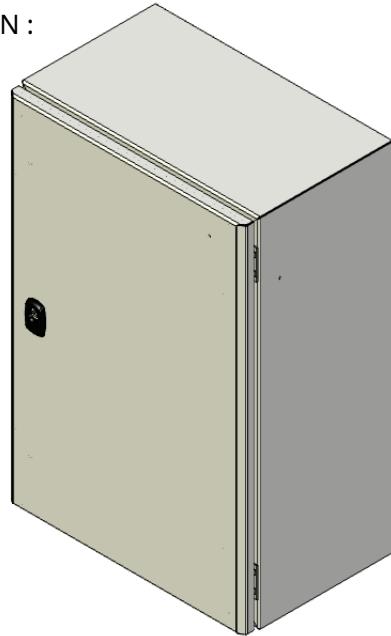


**113956B-230-400**



## Mounting 48V-BAT-18Ah-230-400V

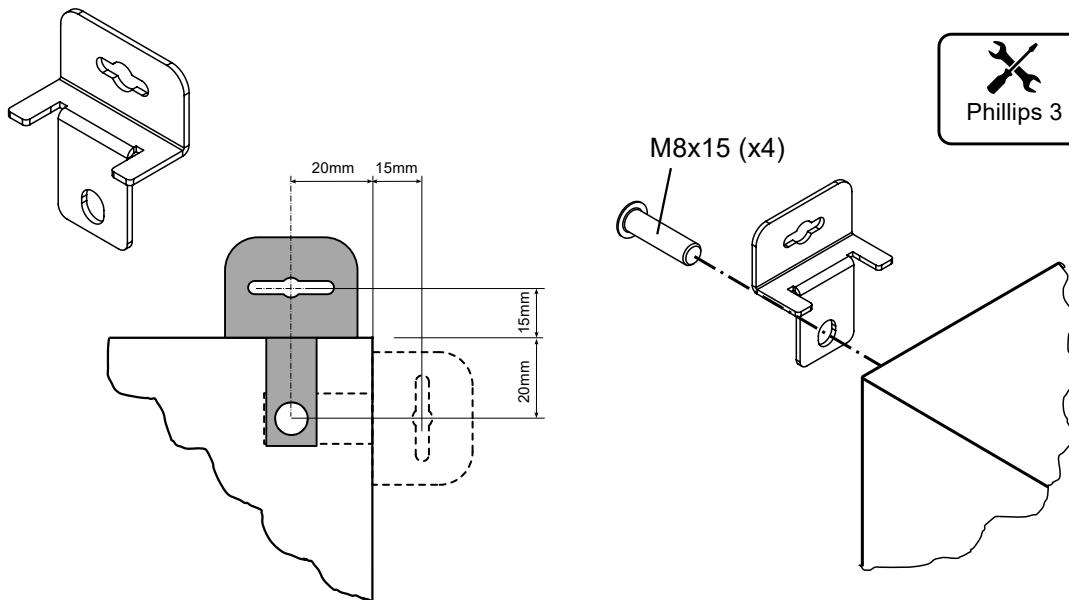


## Overview

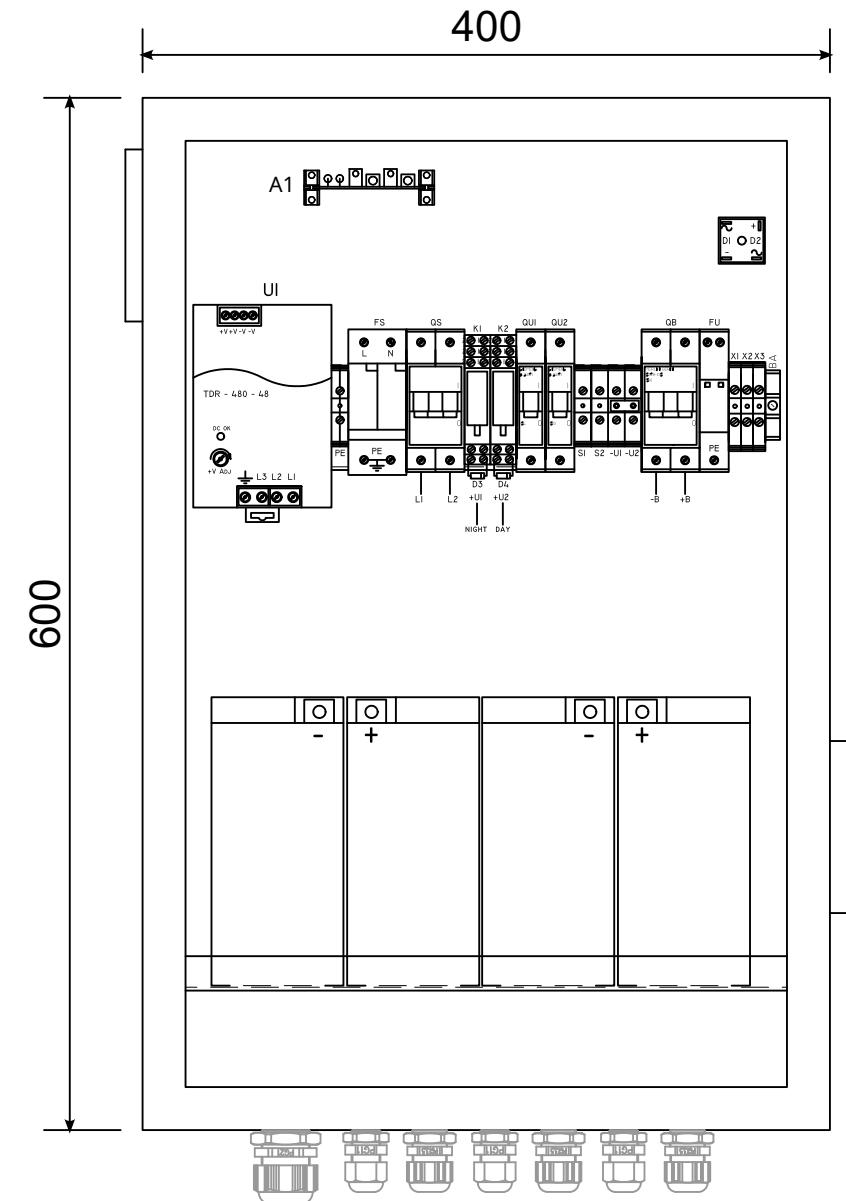


**Check voltage between 2 jobs or in case of prolonged storage every 6 months maximum**

- If necessary, recharge the batteries until their voltage reaches 13.5V (full battery).
- If battery voltage drops below 11V, replace battery.


## Wiring

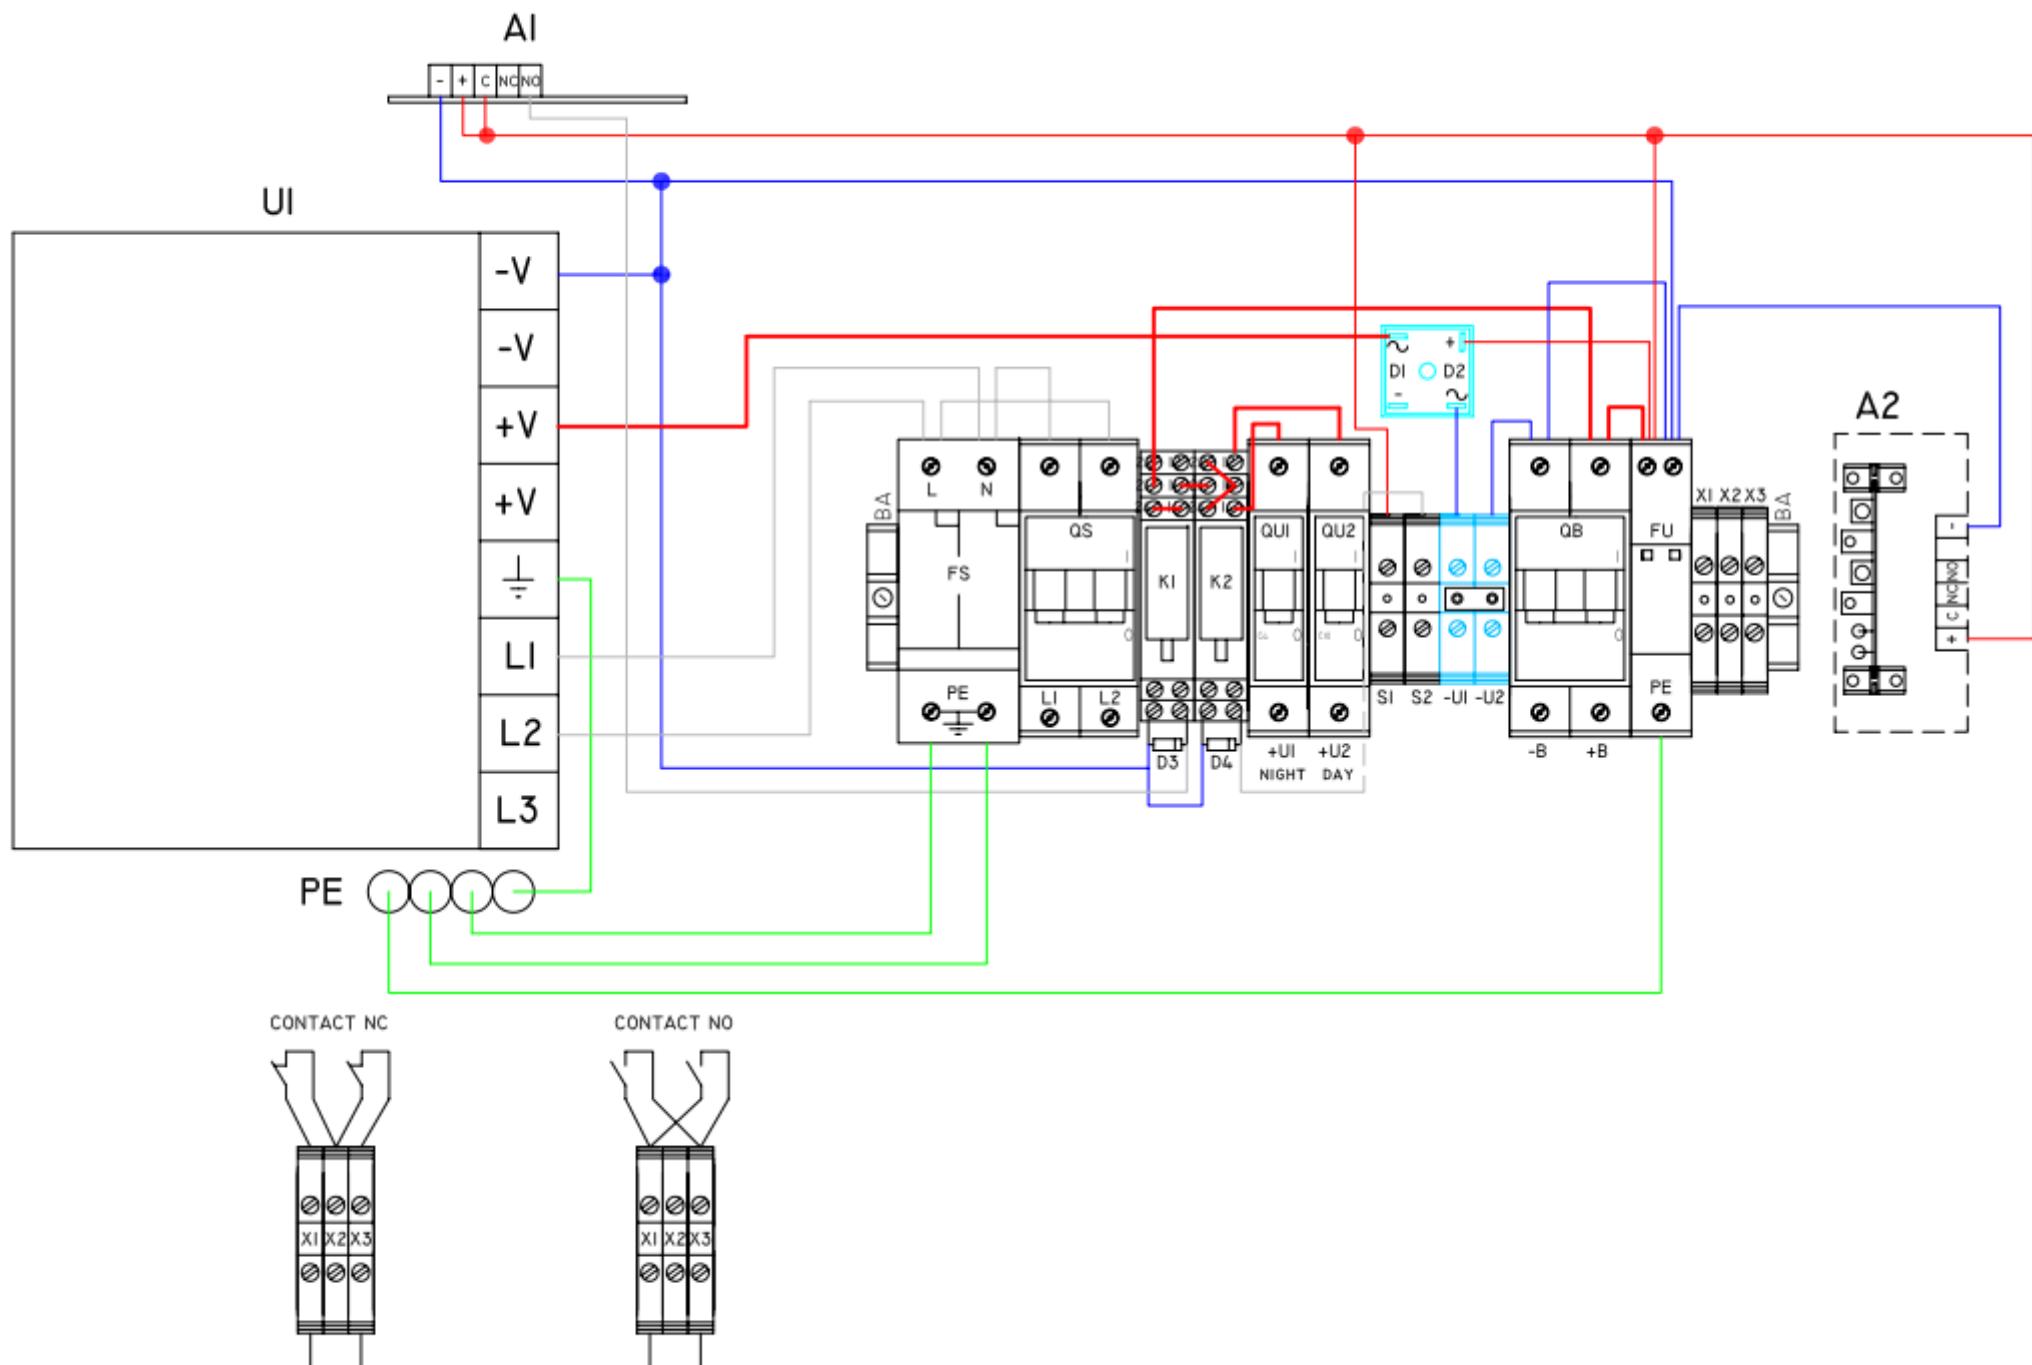


## Electrical diagram

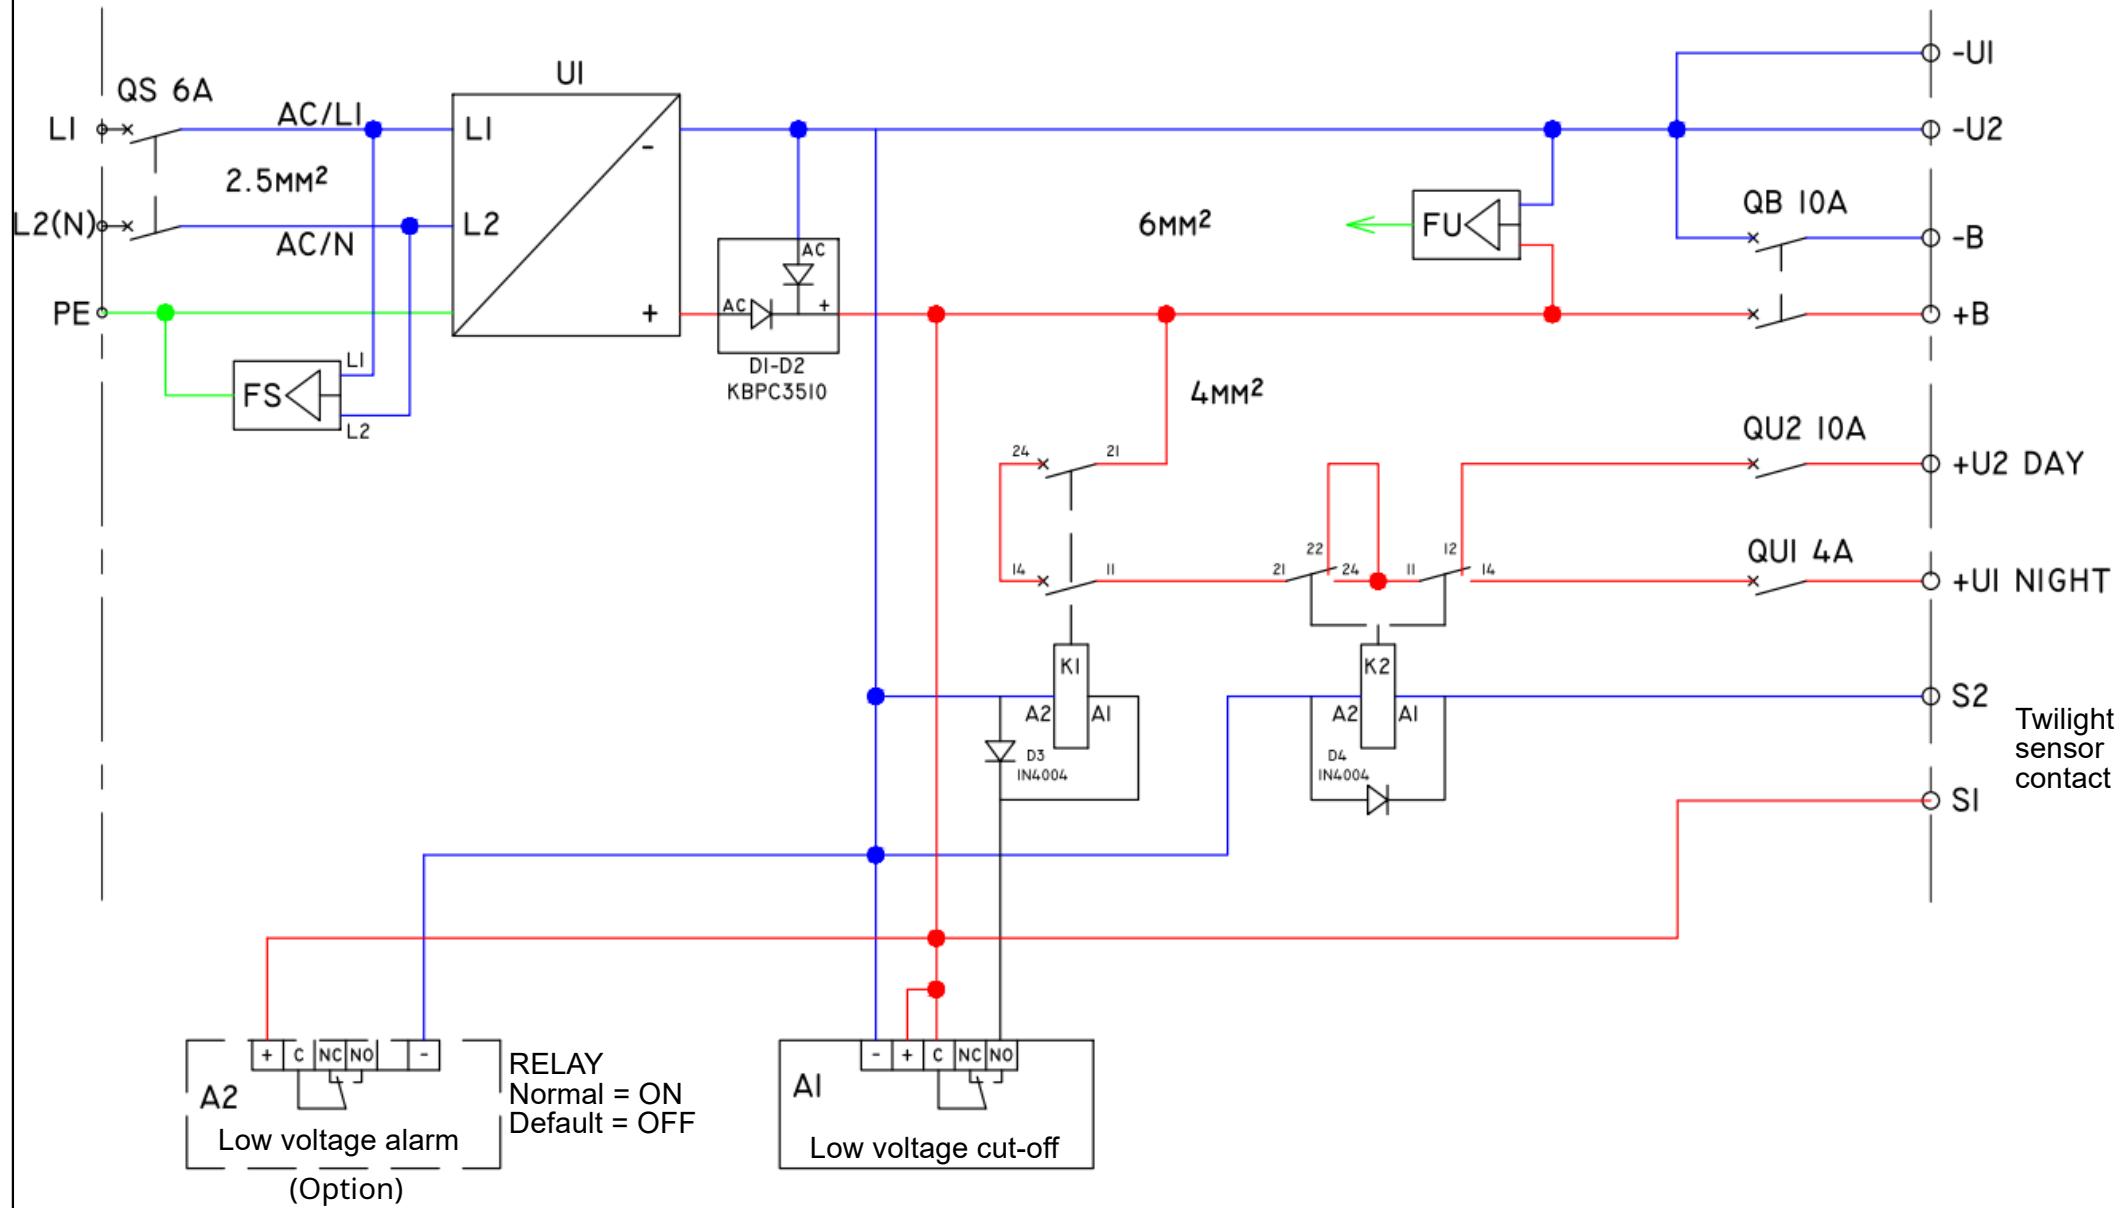

## Battery connection

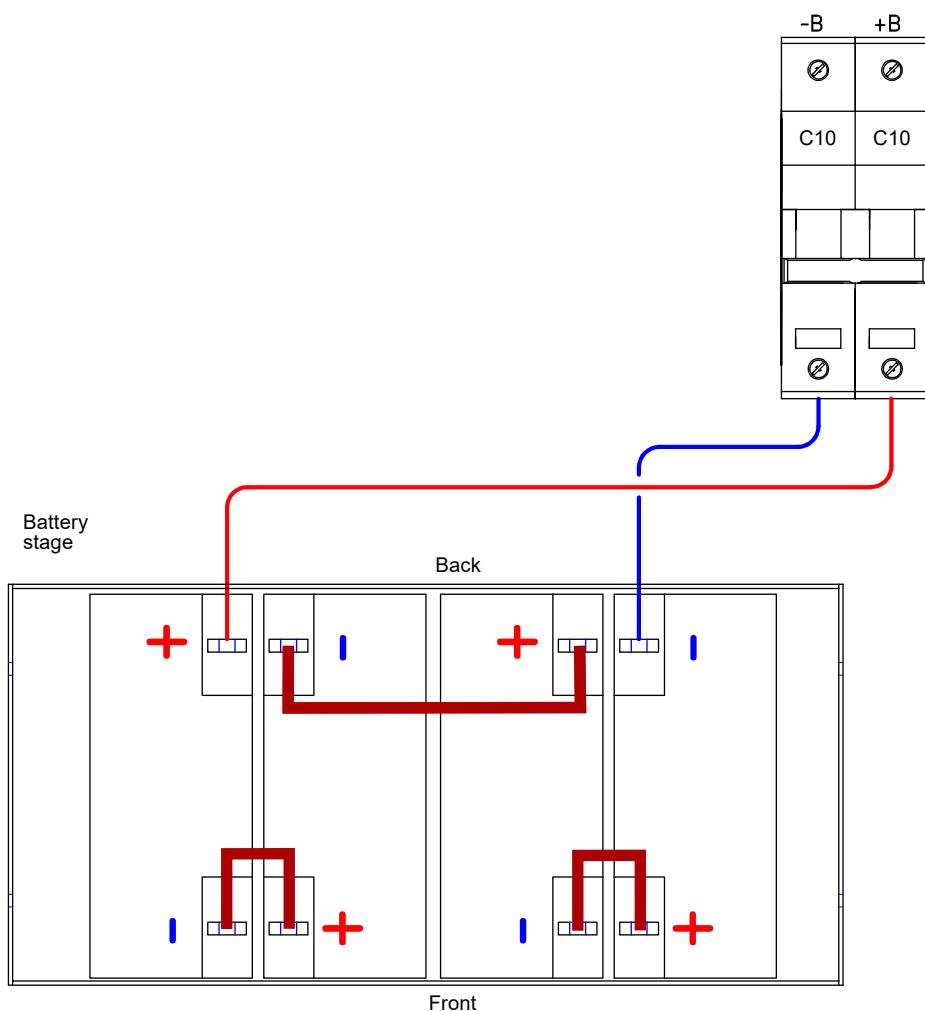

## Connection with twilight sensor

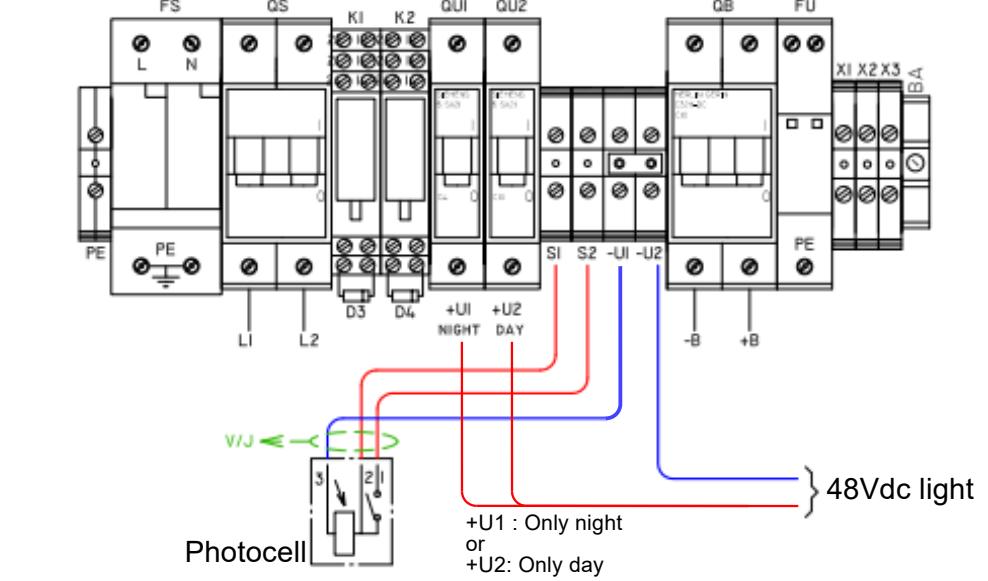

## Connection without twilight sensor

