




Installation instructions for P/N: 113956B

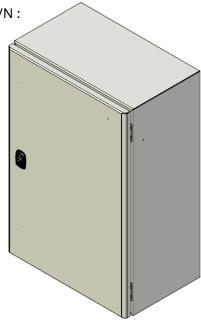



113956B

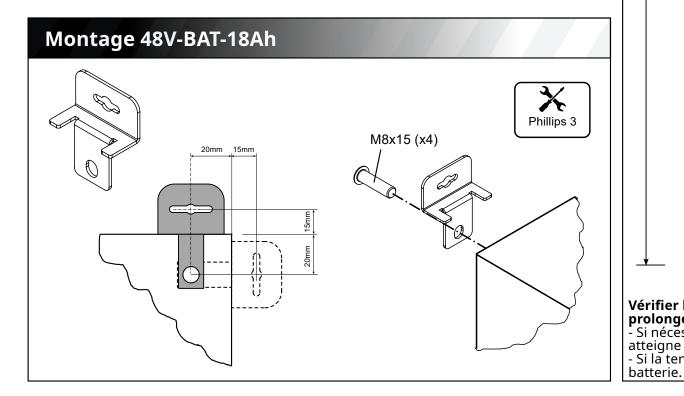




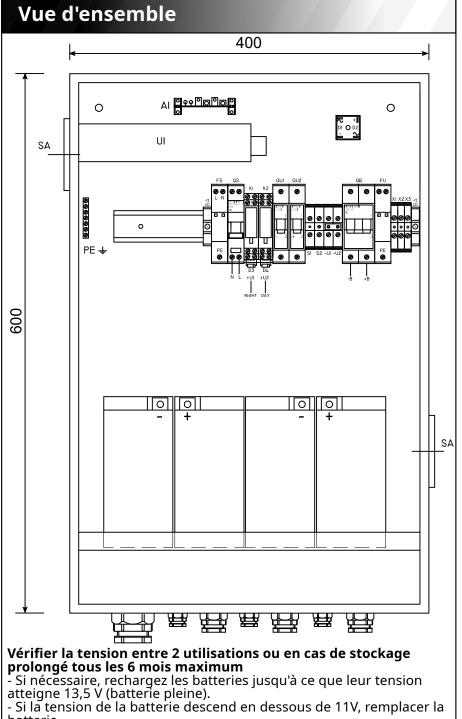

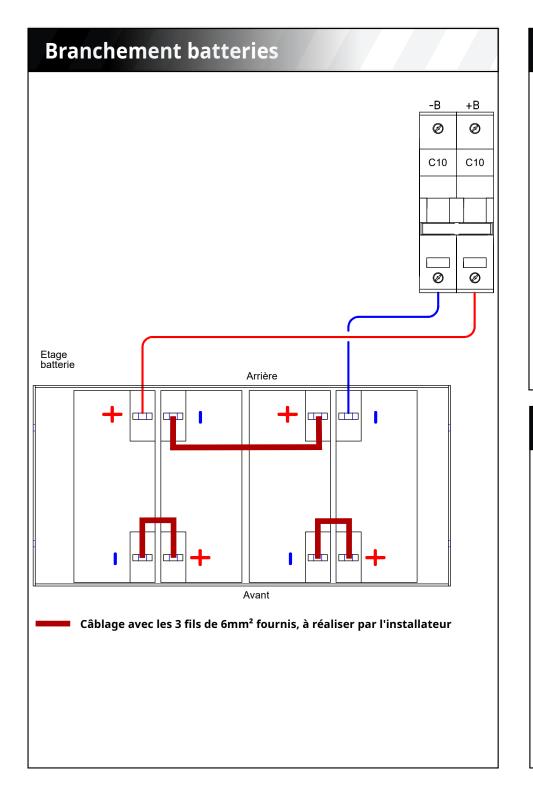

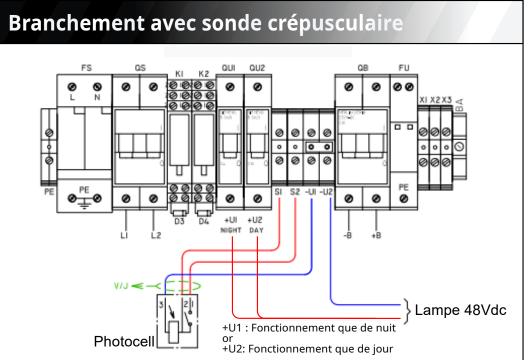

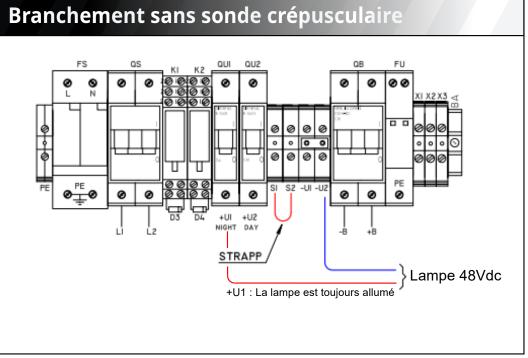

Câblage Α1 D1 - D2 - + C NC NO **A2** U1 00 □□ FS QB **D** FU QS QU1 QU2 000 + C NCNO X1 X2 X3 olololo S1 S2 5 5 M4/6 Q Q Q Q PE PΕ M10/10 +U1 +U2 NIGHT DAY +B PE(X

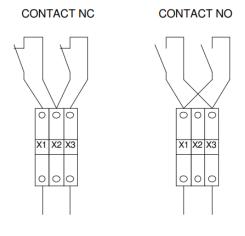


Schéma électrique -UI UI QS 6A AC/LI LI φ -U2 $2.5 MM^2$ QB IOA FU< 6_{MM}² _2(N)⊶ L2 ф -В AC/N PE 6 DI-D2 4_{MM}² KBPC3510 **QU2 10A** QUI 4A 21 🕁 +UI NIGHT Α2 Α2 Contact du P D3 L capteur D4 L crépusculaire - SI + C NC NO - + C NC NO RELAY Normal = ON Default = OFF Coupure de la basse Alarme basse tension tension (Option)